

1. Open your web browser and navigate to the URL;


http://<Device PAP IP>

Enter username and password;

Default username, password, both will be: dlink


2. For SIP, configure your device as per the following,

SIP Configuration

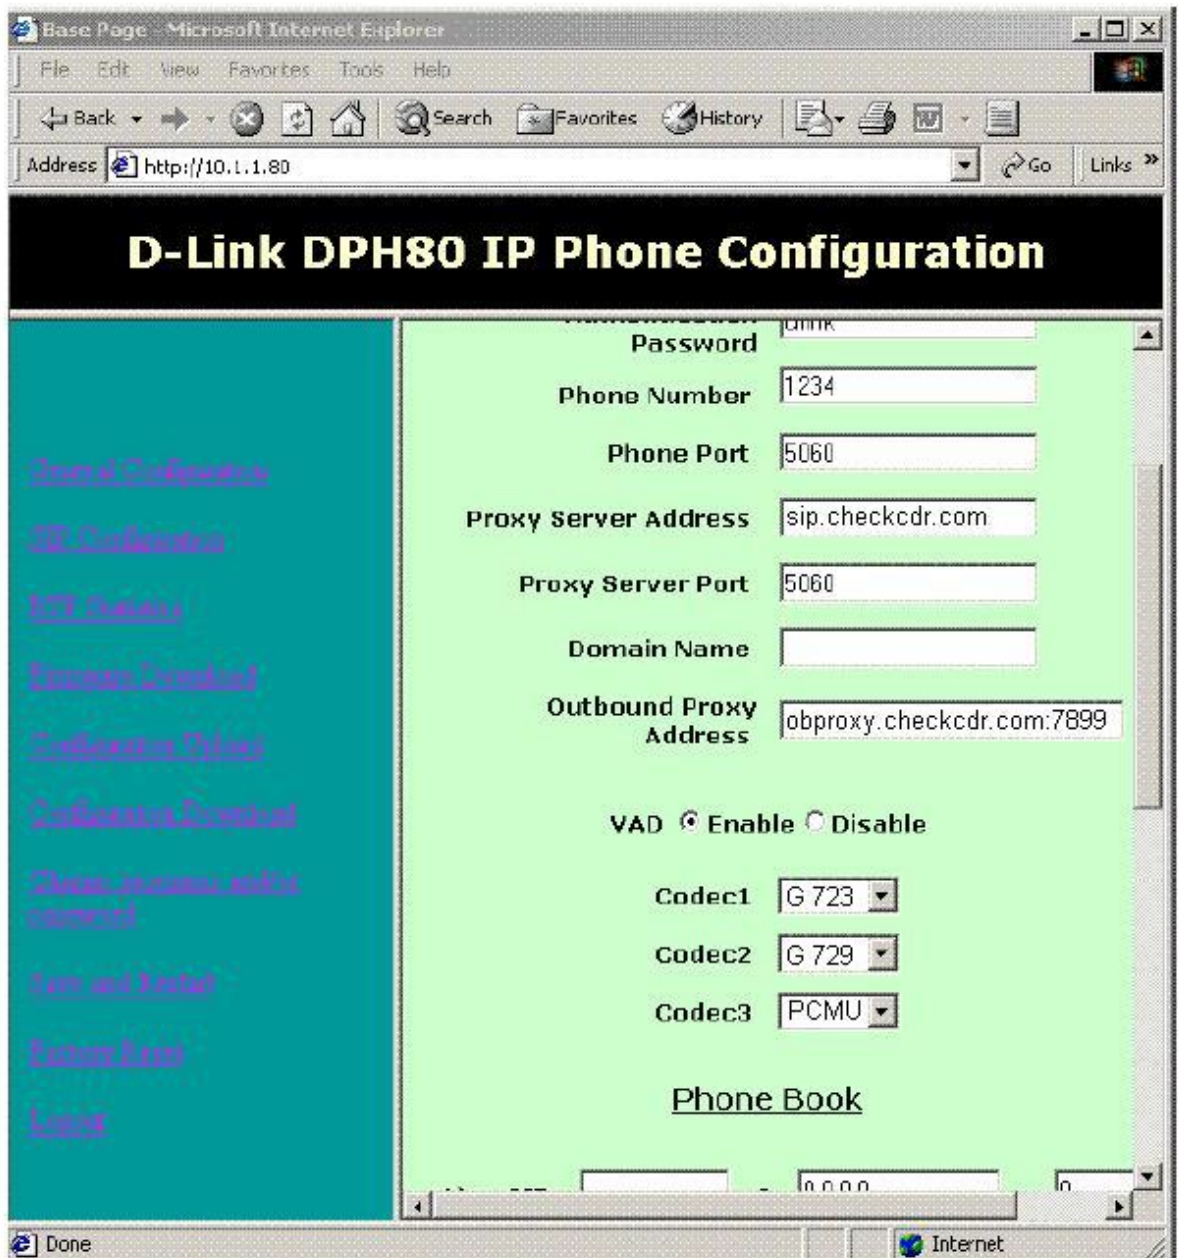

3. For H.323, configure your device as per the following,

H.323 Parameters

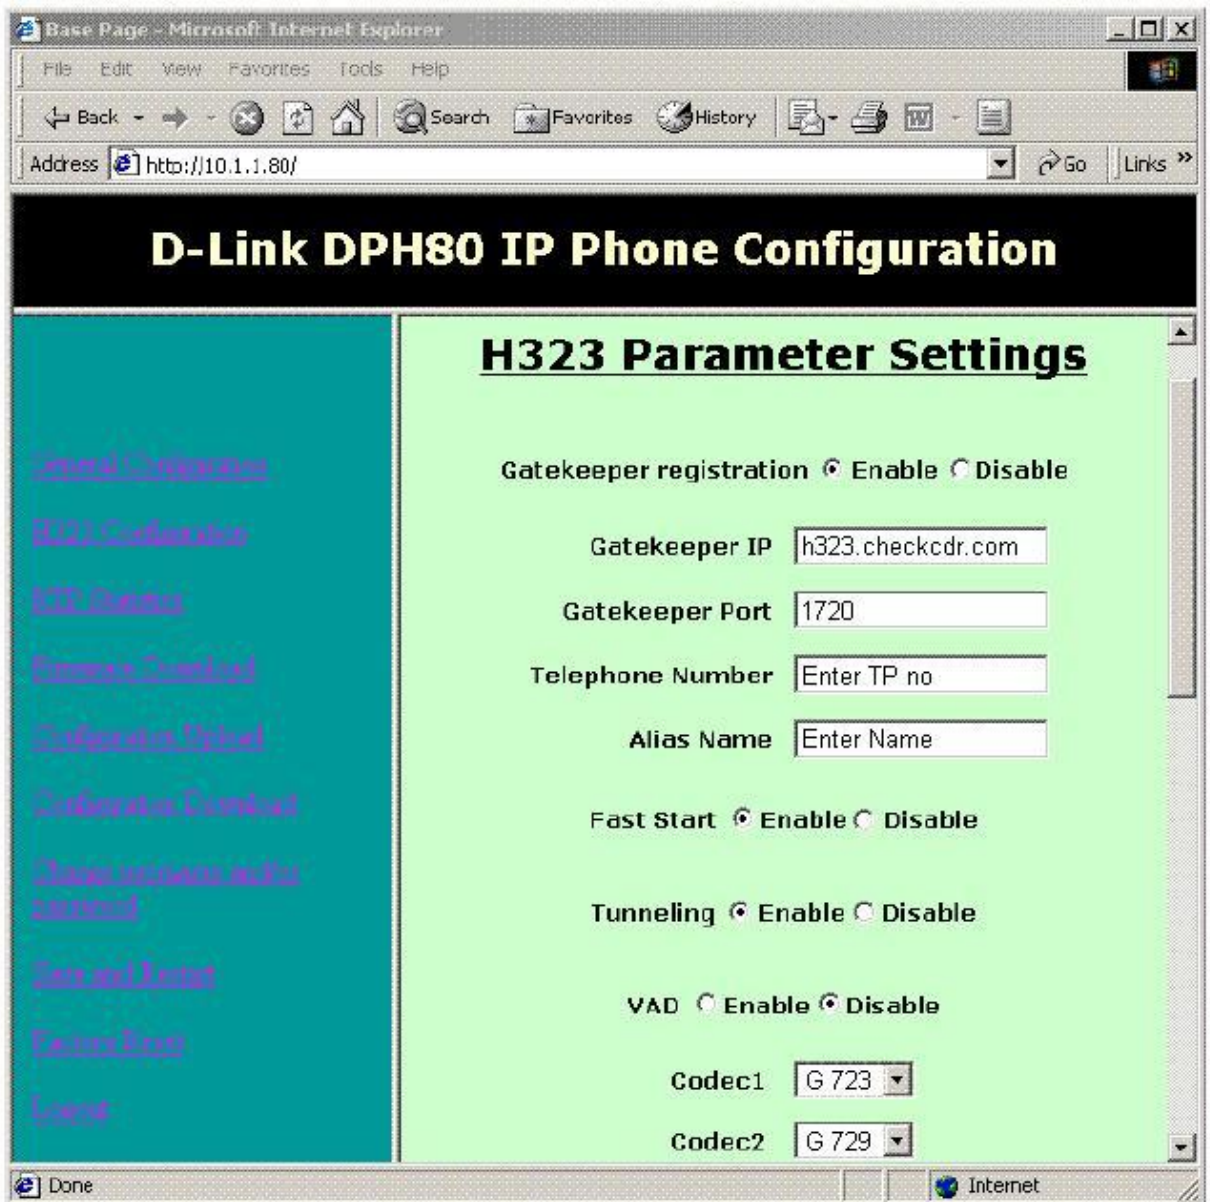

The screenshot shows a web browser window titled "Base Page - Microsoft Internet Explorer" with the address bar set to "http://10.1.1.80/". The main content area is titled "D-Link DPH80 IP Phone Configuration" and features a sidebar with navigation links: General Configuration, H323 Configuration, SIP Config, Firmware Download, Configuration Upload, Configuration Download, Change username and password, Set and Reset, Factory Reset, and Logout. The main panel is titled "H323 Parameter Settings" and contains the following configuration options:

- Gatekeeper registration: Enable Disable
- Gatekeeper IP:
- Gatekeeper Port:
- Telephone Number:
- Alias Name:
- Fast Start: Enable Disable
- Tunneling: Enable Disable
- VAD: Enable Disable
- Codec1:
- Codec2:

4. Now press "Save and Restart" button. Device would restart and Press on "Log off". Now your device is configured and you're ready to make calls.

If you experience any problem with configurations, please do feel free to call for support, and we'll be very glad to assist you.